

FUNCTION OF SWITCH

SWITCH	FOR CCM UNIT ADDRESS	
S2 + S1		
ADDRESS	0~15	16~31
Factory Setting	✓	
S2 + S1		
ADDRESS	32~47	48~63
Factory Setting	✓	

ENC1 SWITCH	(FOR POWER)	
NUMBER	POWER	
4	4000W-5300W (2.0HP)	
5	5400W-7100W (2.5HP)	
6	/	
7	7500W-9000W (3.2HP)	
8	9100W-10500W (4.0HP)	
9	12000W-14000W (5.0HP)	
A	14500W-16000W (6.0HP)	


SW3 SWITCH	FOR AUTO-RESTART SETTING	
ON		
STATE	REMEMBER	NO_REMEMBER
Factory Setting	✓	

SW6 SWITCH	FOR TEMP.COMPENSATION			
ON				
STATE	6	4	2	E function
Factory Setting	✓			

Anti-cold air	
SW1 SWITCH	FOR FAN MOTOR STOP-TEM
ON	
STATE	24 Factory setting ✓
ON	
STATE	15
ON	
STATE	8
ON	
STATE	.....

SW2 SWITCH	FOR FAN MOTOR CONTROL THEN NO POWER REQUEST.	
ON		
STATE	FAN OFF	FAN ON
Factory Setting	✓	

SW5 SWITCH	FOR MAIN-SLAVE SETTING			
ON				
STATE	MAIN NO SLAVE	MAIN	MAIN	SLAVE
Factory Setting	✓			

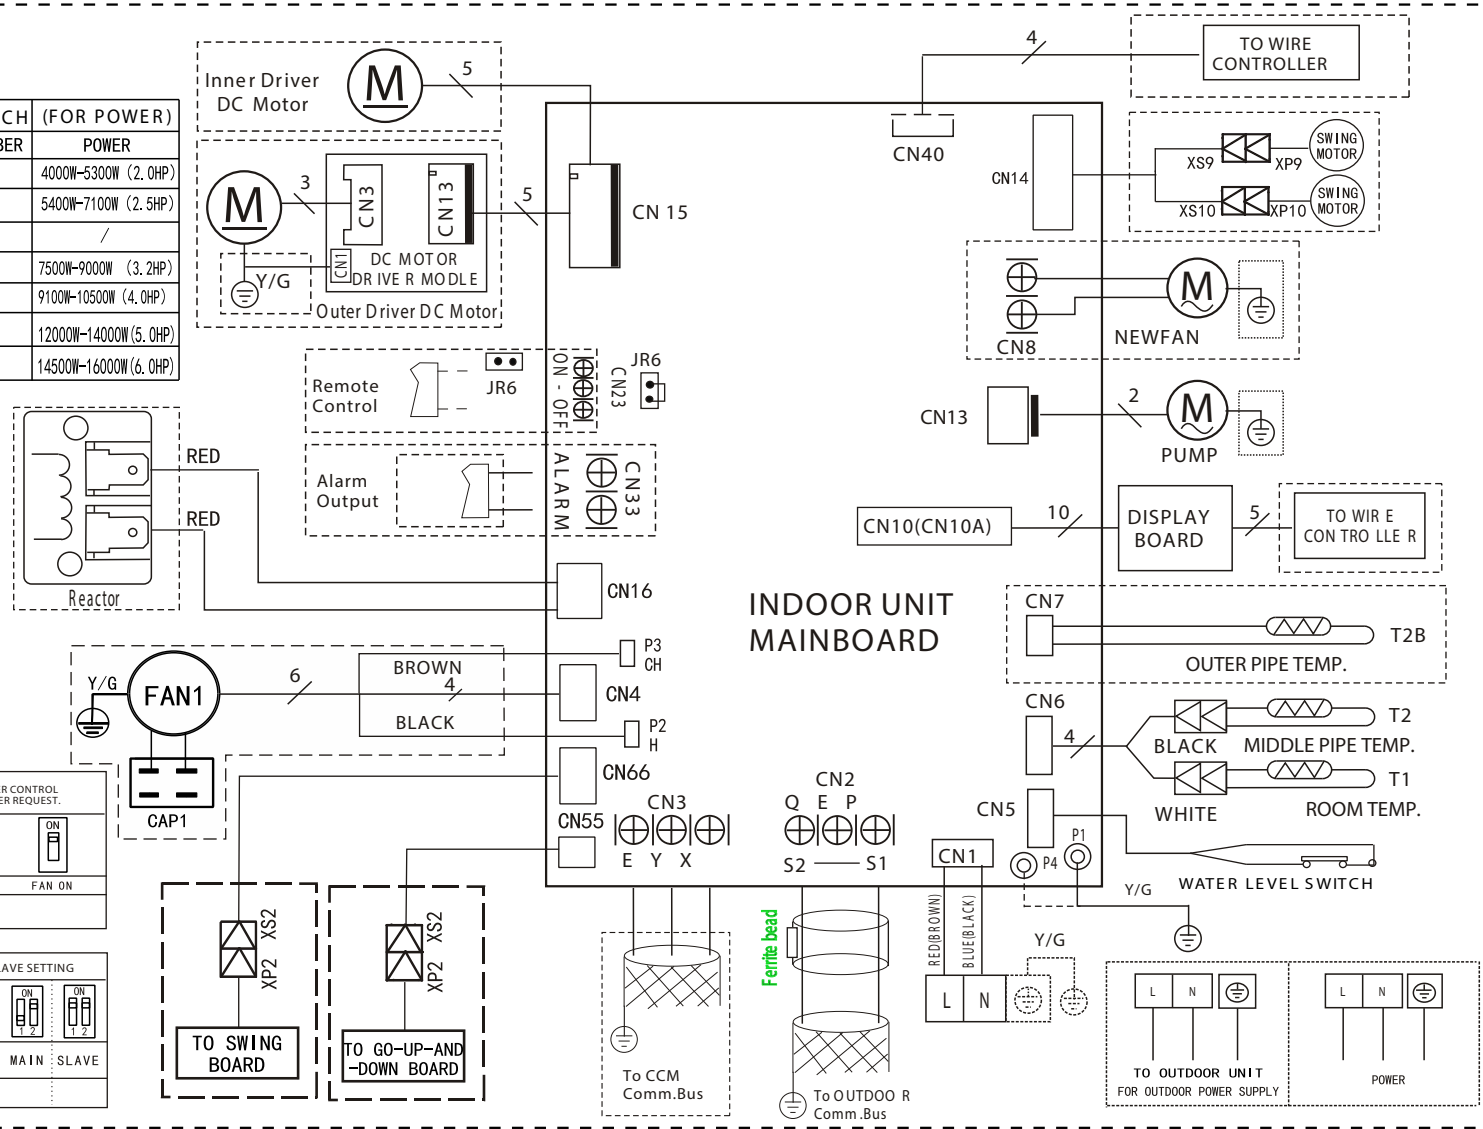

# Air Condition Link-Circuit

202044790380

