

FUNCTION OF SWITCH

SWITCH	FOR CCM UNIT ADDRESS	
S2 + S1		
ADDRESS	0~15	16~31
Factory Setting	✓	
S2 + S1		
ADDRESS	32~47	48~63
Factory Setting	✓	

SW3	SWITCH	FOR AUTO-RESTART SETTING	
STATE			
MODE	REMEMBER	NO_REMEMBER	
Factory Setting	✓		


SW6	SWITCH	FOR TEMP. COMPENSATION			
STATE					
VALUE	6	4	2	E function	
Factory Setting	✓				

Anti-cold air	
SW1	FAN MOTOR STOP-TEM
	24 Factory setting ✓
	15
	8

SW2	SWITCH	FOR FAN MOTOR CONTROL THEN NO POWER REQUEST.	
STATE			
MODE	FAN OFF	FAN ON	
Factory Setting	✓		

SW5	SWITCH	FOR MAIN-SLAVE SETTING			
STATE					
MODE	MAIN NO SLAVE	MAIN	MAIN	SLAVE	
Factory Setting	✓				

ENC1	SWITCH	(FOR POWER)	
	NUMBER	POWER	
	4	4000W-5300W (2.0HP)	
	5	5400W-7100W (2.5HP)	
	6	/	
	7	7500W-9000W (3.2HP)	
	8	9100W-10500W (4.0HP)	
	9	12000W-14000W (5.0HP)	
	A	14500W-16000W (6.0HP)	

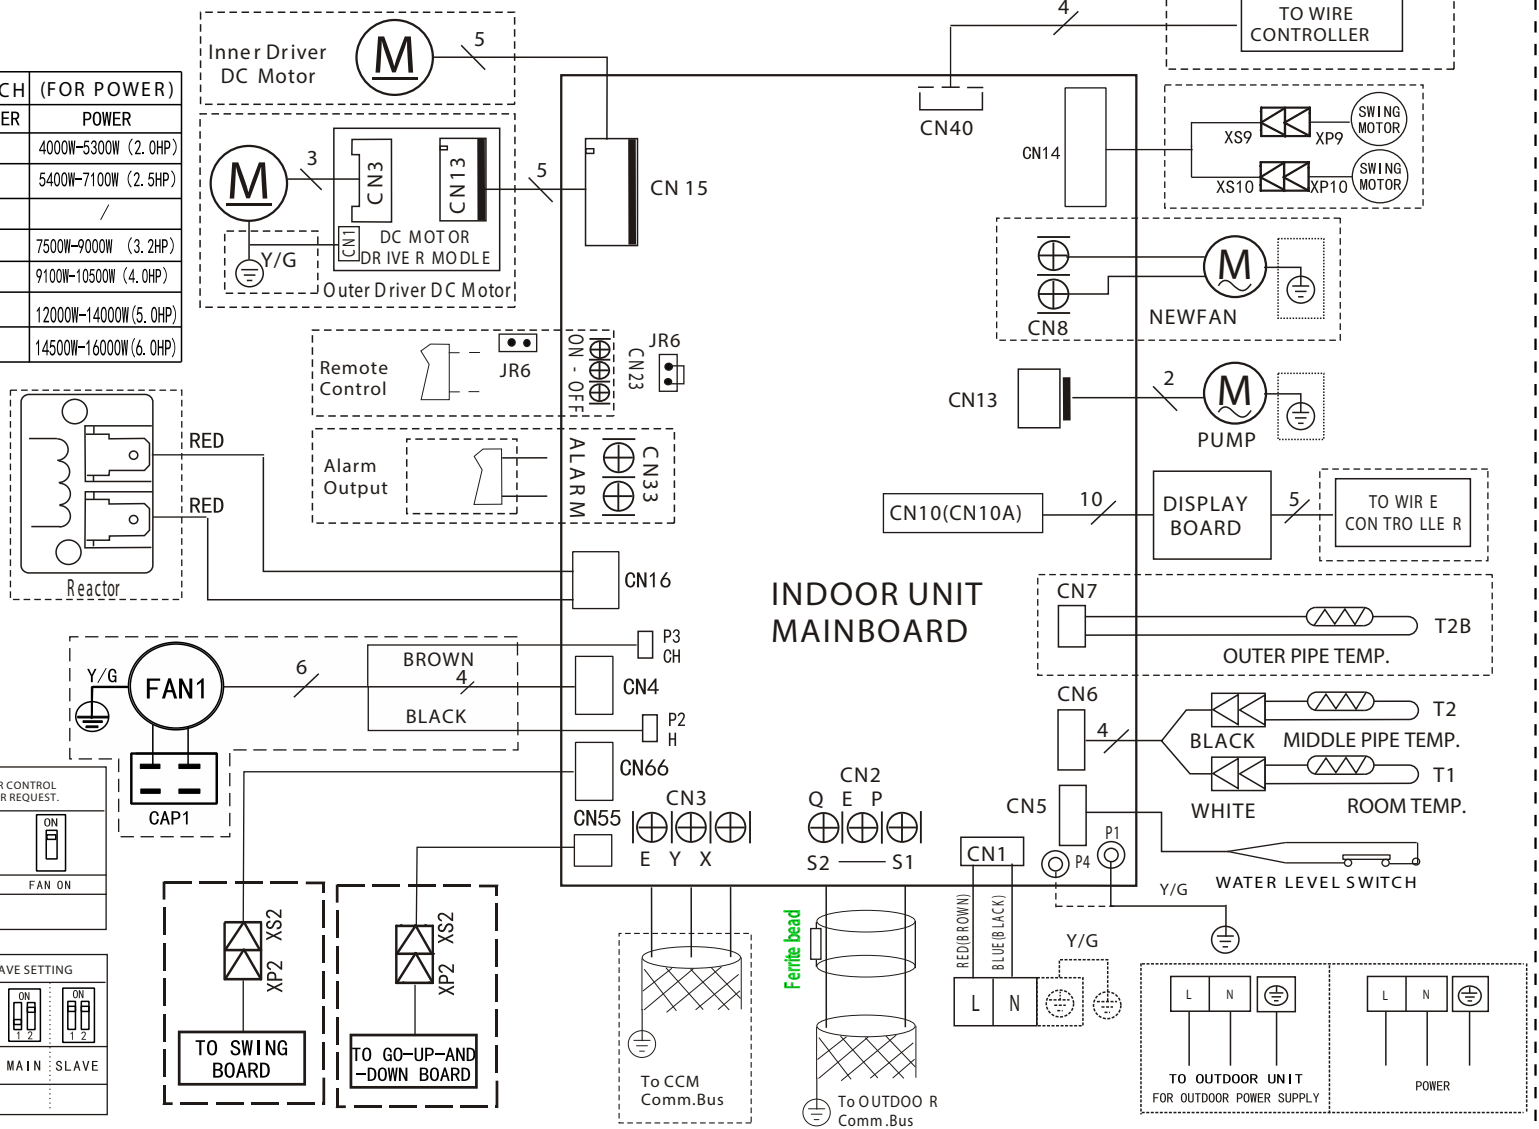

Air Condition Link-Circuit

202044790380

